

## Assembly instructions for transport cart 20-L


1.) For the assembly of the transport trolley you need 20-L the following materials:

- 2x wheels with brakes
- 2x wheels without brakes
- base plate made of wood
- cast iron frame
- 2x connecting struts
- Sliding frame
- screws
- screwdriver or cordless screwdriver
- wrench



2.) Mounting of the wooden plate:

The wooden plate is placed on the floor and the cast iron frame on top of it, as well as watch the picture. Now eleven screws are screwed to the edge of the frame.

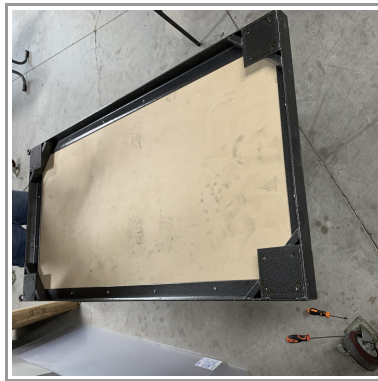

3.) Mounting the wheels:

The 2x wheels with the brake are mounted on the side where the hole for the sliding frame is. The 2x movable wheels are mounted on the opposite side. They are fixed with four screws.



4.) Assembly of the sliding frame:

Put the sliding frame into the matching holes as shown in the pictures.

Now attach the two connecting struts. Attach the screws from outside to inside, as shown in the picture.



**ABC**  
**WORLDWIDE**  
[www.stapelstuhl24.de](http://www.stapelstuhl24.de)